



HOLL'S

COMFORT DESIGN SAUNAS



Manuel d'installation



Installation handbook



Manual de instalación



Manuale di installazione



Installationsanleitung

Utopia

*Read this manual carefully before using your sauna for the first time.
We recommend you keep it in a safe place for future reference.*

*Write down and keep the serial numbers of the sauna as well as the
purchase invoice.*

*They may be requested from you during your after-sales service
request.*

CONTENTS

RECOMMENDATIONS	20
SAFETY INSTRUCTIONS	21
DESCRIPTION	22
INSTALLATION	24
INFORMATION	26
ASSEMBLY	27
CONTROL PANEL	31
MAINTENANCE & SERVICING	32
WARRANTY	33

RECOMMENDATIONS

- Install the sauna on a perfectly flat floor.
- The sauna must remain in a dry area.
- Do not use it near a source of water (bath, damp floor, swimming pool).
- Do not use liquid cleaning products.
- Disconnect the sauna before cleaning and use a wet rag. (see Maintenance section)
- Protect the sauna's electrical cable to avoid it being crushed or pinched.
- Prior to replacing certain components, ensure that they are specified by the manufacturer or that they have the same features as the original parts. Incorrect replacement can cause a fire, a shortcircuit or damage to the sauna. We strongly recommend using a qualified technician.
- To avoid the risk of burns or electric shocks, do not use any metal tools.
- Do not put animals in the sauna.
- Do not leave the sauna switched on without supervision.
- Do not leave the sauna switched on for more than 3 hours at a time to avoid premature deterioration of the equipment. After 3 hours continuous usage, switch off the sauna for at least one hour.
- We recommend that you do not install a locking system on the sauna door.
- Check compliance of your electrical installation prior to connecting your sauna to the power supply.

SAFETY INSTRUCTIONS

IMPORTANT : Please read the safety instructions carefully before installing and using your sauna cabin. They are essential for your safety, so please adhere strictly to them.

Beware of hyperthermia, heat stroke or heat exhaustion which can be caused or aggravated by noncompliance with the safety instructions. Symptoms are fever, a rapid pulse, dizziness, fainting, lethargy and numbness in all or part of the body. The effects are: reduced awareness of the heat, ignorance of imminent risks, loss of consciousness.

The sauna must not be used by :

- Children under 6 years of age.
- People with severe reactions to sunlight.
- Elderly or disabled people.
- People with previous medical conditions such as heart disease, high or low blood pressure, blood circulation problems or diabetes without prior medical advice.
- Pregnant women
- Excessive temperature can endanger the foetus.
- Persons suffering from dehydration, open sores, eye disorders, burns or sunstroke.

In the event of problems involving health, medication or injury to muscles or ligaments, do not use the sauna without previously consulting a doctor and obtaining approval.

If surgical implants are worn, do not use the sauna without previously consulting a doctor and obtaining his approval.

Do not use the sauna after strenuous activity. Wait 30 minutes for your body to cool down.

Do not spend more than 40 minutes in the sauna at any one time.

Do not consume alcohol or drugs before or during the session.

Do not sleep in the sauna when it is in operation.

To avoid the risk of overheating, connect your sauna to a sufficiently powerful electrical outlet and do not connect other electrical equipment to the same wall socket.

To avoid any risk of electrocution or damage to the sauna, do not use it:

- During thunderstorms.
- If the electrical cable is damaged, it must be replaced by a qualified person.
- If the electrical cable overheats, it must be checked by a qualified person.
- If you have to change a bulb, wait until the sauna is switched off and cooled down.

Dry your hands before connecting or disconnecting the electricity. Never work with wet hands or feet.

Do not switch the electricity or the heating system rapidly on or off as this could damage the electrical system.

Do not try to repair the sauna by yourself without the agreement of the sauna's distributor or manufacturer. Unauthorised attempts to repair it will invalidate the manufacturer's warranty.

Do not use any type of detergent inside the sauna.


- Do not pile up or store objects inside or on top of the sauna.

Do not place flammable materials or chemical agents near the sauna.

DESCRIPTION

General features

- Cabin made from Canadian wood
- Hourglass
- Starry sky
- Ventilation grid
- Warranty 2 years electronics, 10 years woodwork
- Steam accessories

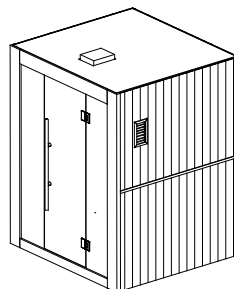

Certificates



Complies with current European standards.



Manufacturing process uses no heavy metals.

Package contents

- 1 x installation & user manual
- 1 x door handle (internal and external part)
- 1 x Electric Stove Protection Cradle
- 1 x steam sauna accessory pack
(Including thermometer, hygrometer, hourglass, bucket, ladle and light fixture)

Panel	Dimensions	Number
Top panel	5 x 40 mm	12
Left panel	6 x 75 mm	4
Right panel	6 x 75 mm	4
Bench support	5 x 40 mm	2
Oven railing	4 x 30 mm	8
Backrest	5 x 40 mm	3



5*40mm



4*30mm




3*25mm



6*75mm

DESCRIPTION

EN

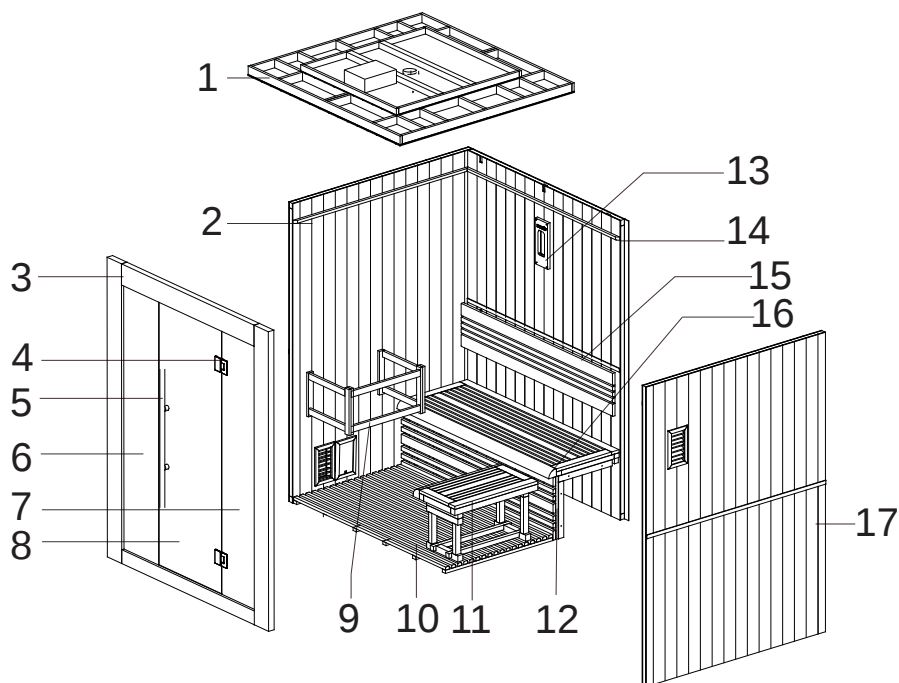

- | | |
|--------------------|---------------------------------------|
| 1. Top panel | 10. Floor panel |
| 2. Left panel | 11. Side bench (depending on version) |
| 3. Front panel | 12. Bench support |
| 4. Hinge | 13. Control panel |
| 5. Handle | 14. Rear panel |
| 6. Windows (left) | 15. Backrest |
| 7. Windows (right) | 16. Bench |
| 8. Door glass | 17. Right panel |
| 9. Oven railing | |

INSTALLATION

Read the assembly instructions carefully before starting assembly.

Choice of location

Sauna-Center saunas are designed solely for interior installation.

Select a space:

- Inside, in a dry area, on a flat stable floor that can support the weight of your sauna.
- The height must be sufficient for you to reach the ceiling and carry out electrical connections and maintenance.
- Away from any source of water, flames or flammable materials.

Practical advice:

- Note that sauna assembly requires two or three adults.
- Clearly identify each panel before you begin.
- During assembly, position your sauna's mains cable so that it is easily accessible.
- Note that there are variations between the models.

Electrical connections

The electrical installation of the stove must be carried out by a professional and sized according to the power of the stove. The stove is thus connected with its own electric line, not supplied as it depends on your installation.

This installation must be planned before mounting the cabin.

All the sauna's internal electrical installations (lights, LEDs, etc) are independent of the heater's power supply, and have a dedicated wall socket provided.


Electrical sizing:

Example of data for an installation within 10m for a Harvia Vega stove.

Power of the stove (kW)	Sauna volume (m³)		Electrical connection			
			230V 1N	Fuse	400V 3N	Fuse
4,5	3	6	3 x 2,5	1 x 20	5 x 1,5	3 x 10
6	5	8	3 x 2,5	1 x 35	5 x 1,5	3 x 10
8	7	12	3 x 6	1 x 35	5 x 2,5	3 x 16
9	8	14	3 x 10	1 x 50	5 x 2,5	3 x 16

INSTALLATION

Electrical connection for Harvia Vega stove

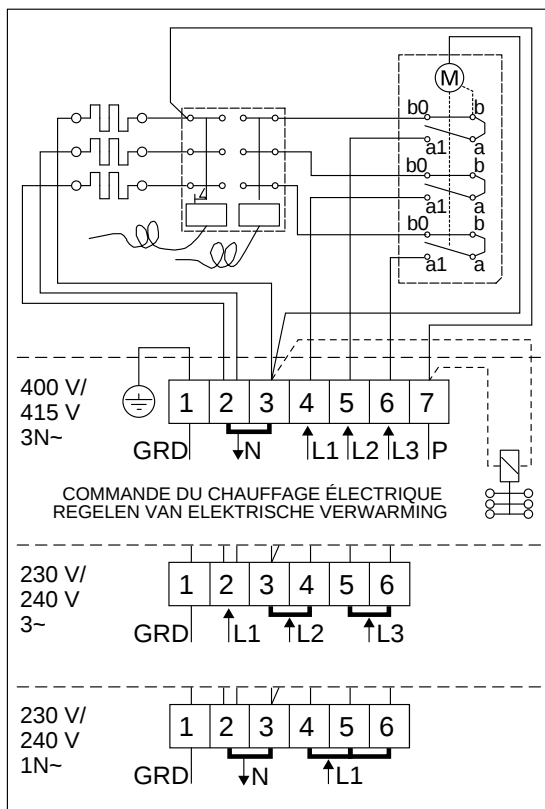


INFORMATION

Ignition and delayed start:

The basic Harvia Vega stoves contained in the Traditional Holl's sauna packs allow you to start the stove instantly or even make a delayed start as follows:

Zone A

operation from 1 to 4 hours

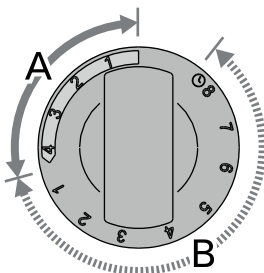


Zone B

Delayed departure from
0 to 8 a.m.

General explanations on the operation of the Harvia stove:


The temperature rise in the sauna is done in stages. A booth takes on average 30 to 45 minutes to reach a temperature of 65-70 ° C. During this period, the lava stones store heat.

To reach higher temperatures, it is necessary to add water to the stones. The steam thus generated will allow a gradual and measured increase in temperature.

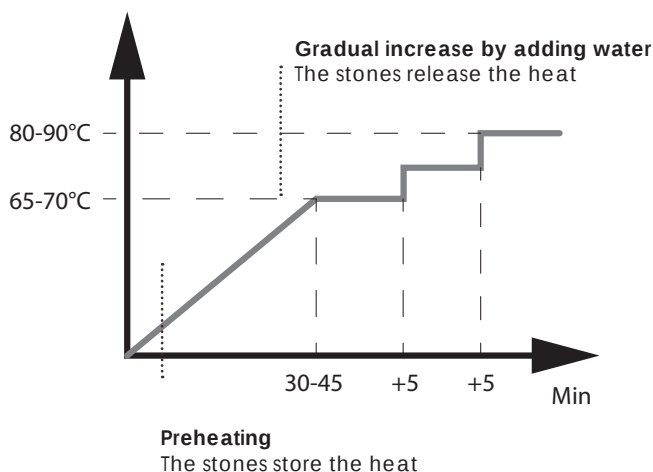

ASSEMBLY

UTOPIA 3

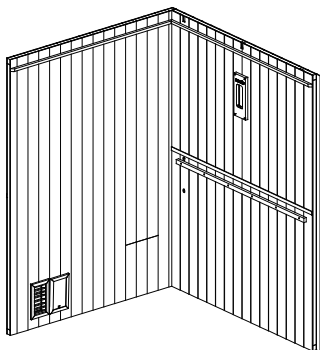


Step 1

Position the rear panel and the left panel using the screws provided.
(4 screws $\varnothing$ 6 x 75 mm)



6*75mm

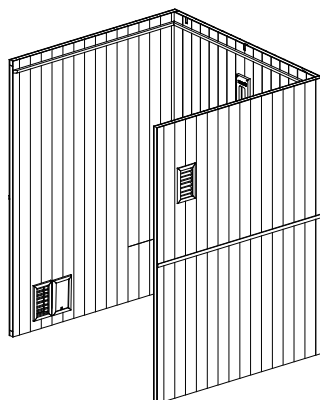


Step 2

Position the rear panel and the right panel with the screws provided.
(4 screws $\varnothing$ 6 x 75 mm)



6*75mm

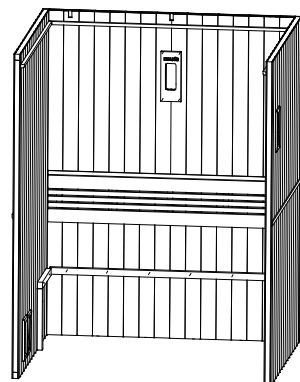


Step 3

Position the folders on the horizontal brackets, then screw them.
(3 screws $\varnothing$ 5 x 40 mm)




ASSEMBLY

UTOPIA 3

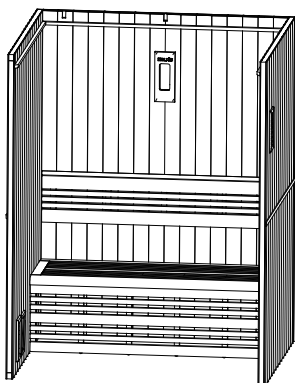


Step 4

Position the bench stand and bench with the screws provided.
(2 screws $\varnothing$ 5 x 40 mm)

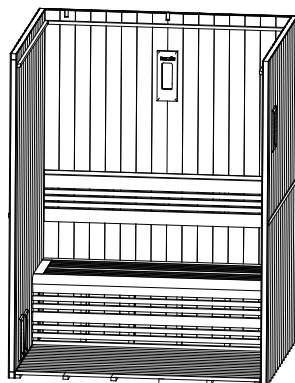


Step 5

Position the floor.

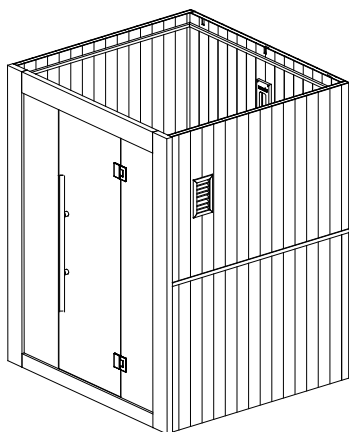


Step 6

Position the front panel using the hooks.



1




2



3

ASSEMBLY

UTOPIA 3

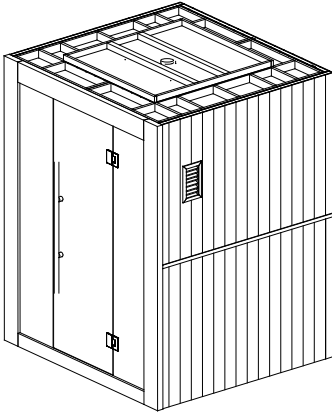

Step 7

Make sure you position and adjust both sides of the ceiling.
(12 screws Ø 5 x 40 mm)




Step 9

Connect the plugs for the backrest LED strips to the sockets on the rear panel.

EN


ASSEMBLY

UTOPIA 3

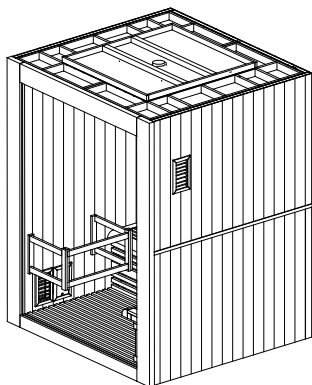

Step 9

Place and screw the stove holder according to the position of the ventilation.
(8 screws $\varnothing$ 4 x 30 mm)

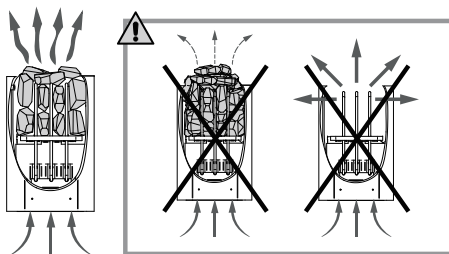


Connect the stove electrically, as well as the electrical elements of the cabin, then install it and add the stones evenly on top.

Do not let any stones fall into the stove.

Do not press the stones between the heating elements.

The stones should not be too tight, they should support themselves without resting on the heating elements.

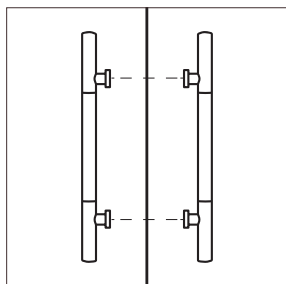

Step 10

On the outside of the door, position the handle facing the holes.

Install the screws through the inside of the door and secure the handle.

CONTROL PANEL



1. Switching on

When the system is in sleep mode, press the power button. The system will start and all lights will turn on.

2.  Press the colour light button to control the **colour light** on and off. When the coloured lighting is on, press and hold the coloured lighting button for 3 seconds, the display will show 'L1-L9', which can change the colour of the LED lighting, press the button once to change the colour, it can be cyclic and memorised (L1 full light L2 red and blue L3 blue L4 blue and green L5 green L6 green and red L7 red L8 jump change L9 gradient). In the multimedia state activated, 30 seconds have elapsed since the button was pressed, the system exits light control mode and the display shows the multimedia state.

3.  Tap the LED lighting button, you can control the on and off of the LED lighting.

4. Audio functions

(1)  Press the **Bluetooth** button to open the Bluetooth function, and the screen will display 'bLU'. the screen will display 'bLU'.

Note: During Bluetooth pairing, the Bluetooth name is 'Sauna', no password is required.

Press TUN+/- to select a song, press VOL+/- to adjust the volume.

(2)  Press FM to turn on/off the radio, digital tube displays radio frequency. radio frequency. When you turn on the radio, long press FM to automatically search for stations and record them. to automatically search for stations and save them. Press TUN+/- to select the radio station and press VOL+/- to adjust the volume.

5. Child lock function

If no key is used for more than 3 minutes, the system locks. lock state. At this time, if you press another key, the display will show « LOC ». You must then press and hold the child lock key for 3 seconds to unlock the system.

EN



MAINTENANCE & SERVICING

Disconnect the cabin's power supply cable before undertaking any work.

Problems identified	Possible reasons	Solutions
Electric stove does not heat up.	Power supply cable disconnected	Check power supply cable connection
	The general power supply is cut	Check that the switchboard and wall plug are working
	Stove is overheat protected.	Refer to the electric stove manual

Servicing

1. Disconnect your sauna.
2. Use a vacuum cleaner to remove dust from crevices in the woodwork.
3. Clean the cabin with a damp cotton cloth and use a small amount of soap if necessary. Rinse with a damp cloth.
4. Wipe with a dry cloth.

IMPORTANT

Do not use benzene, alcohol, chemical agents or strong detergents on the sauna since chemical products can damage the wood and its protective coating. Do not spray water on your sauna.

Practical advice:

To extend the life of your sauna, we recommend that you apply linseed oil to the benches, back rests and flooring of your cabin with a lint-free cloth. If your sauna's flooring or bench are indelibly marked, rub them lightly with sandpaper.

WARRANTY

Warranty

All the components of France-Sauna saunas are guaranteed for 2 years and wood 10 years..

The warranty comes into force on the date of dispatch (corresponding to the date the invoice is issued).

The warranty does not apply in the following cases :

- Malfunction or damage arising from installation, usage or repair that are not in compliance with the safety instructions.
- Malfunction or damage arising from conditions that are unsuitable for the equipment's originally intended purpose.
- Damage arising from negligence, accident or force majeure (thunderstorm or bad weather).
- Malfunction or damage arising from the use of non-authorised accessories.

The warranty does not cover the costs linked to returning the cabin or part of its components to our workshops of. Under the warranty, in the event of a breakdown, the items deemed defective by our technicians will be exchanged. Information and explanations required for their installation will be provided by one of our technicians.

Costs linked to the use of subcontract labour provided by a third party cannot be covered by France-sauna.



www.holls.fr

Technical assistance - Assistance technique
Asistencia técnica - Assistenza tecnica
Technische Unterstützung

+33 (0)4 91 51 01 99

 **Poolstar**
Source d'innovation

Distribution POOLSTAR FRANCE | www.poolstar.fr | 960 avenue Olivier Perroy, 13790 ROUSSET- FRANCE

Edition 03-2025